


## Snowsled Trail Wheel Positioning

Before proceeding please note the order/positioning of the bearings and spacers on each end of the axles.

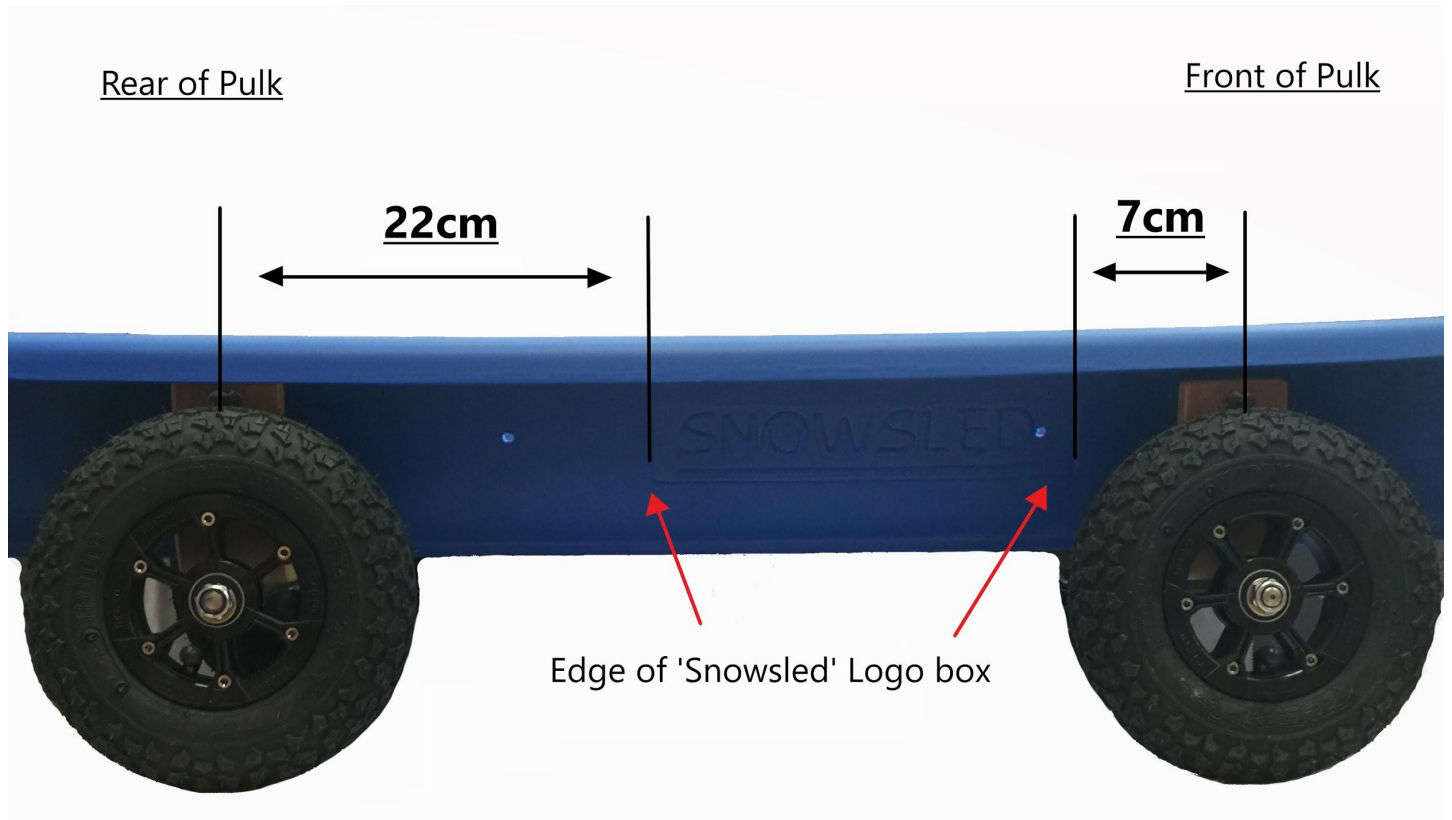

The suggested mounting position for the Pulk wheels is shown in the above diagram.

To mount the wheels;

1. Place pulk upside down and position wooden wheel supports with-out the wheels and tyres mounted. Hold wheel supports firmly in position and with a M5 drill bit, drill through the pulk, using the threaded mounting hole in the support as a guide.



2. Remove the wheel support and enlarge the holes in the pulk using a M6.5 drill bit.



3. The wheel axles are now ready to be fitted to the pulk using the black handled bolts provided.



4. Fit the wheels to the axles and tighten the retaining locknut, do not overtighten.